



IBM ThinkPad 560z Battery Removal

Removing the battery in one easy step.

Written By: Derek Driscoll



INTRODUCTION

How to remove the battery so it can be replaced.



TOOLS:

- [Fingers](#) (1)
-

Step 1 — Battery



- Slide the battery release latch to the right.
- Pull out the battery.

This document was last generated on 2017-08-16 07:31:05 PM.